


# Solar-powered lighting

Product installation instruction

## Remote Control Instructions

Remote control range 5-8 meters

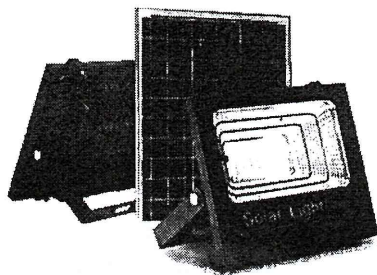


Light control mode

Light up for 3 hours


Light up for 5 hours

Light up for 8 hours


Semi-bright mode

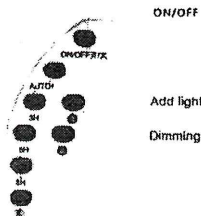

## Installation Guide

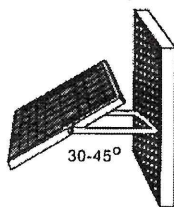

Use 2 expansion screws to fix the solar panels on the wall

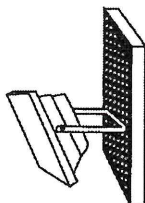

Use 2 expansion screws to fix the solar lamp on the wall



Plug the twist after the twist cap

**Tips** The battery must be fully charged before using 3-5 rainy days.

## Installation Notes

1. Solar lights in the factory has been charged with electricity, you can normally light, please check the lights before installation Whether it is working properly;

2. The lamp and solar panels connected to the solar panel against the light, the light does not shine, unplug the connector light, Light sense normal;

3. On the front of the lamp, 5 meters above the lights by AUTO (red), the button lights flash 5 under the lights And remote control is normal;

Note: the remote control must be remote control receiver, or remote control is not sensitive remote control distance 8-15m;

4. A the lamp with two inflated studs on the wall, as schematically;

B The solar panel Angle adjusts according to the light intensity and time;

C. lamps can not be installed in low-lying areas, so as not to soak;

5. Plug the male and female plugs and tighten the waterproof cap and install it

6. After installation check the installation is solid, use the remote control of the lamp to check;