

# COMBO


## LED FLOOD LIGHT

كشاف ضوئي ليد





Provide you with lighting requirements for indoor and outdoor lighting for a variety of places

BA-FL-300W

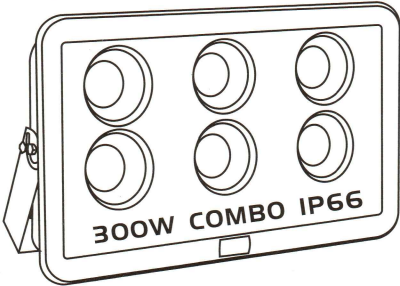

BA-FL-400W

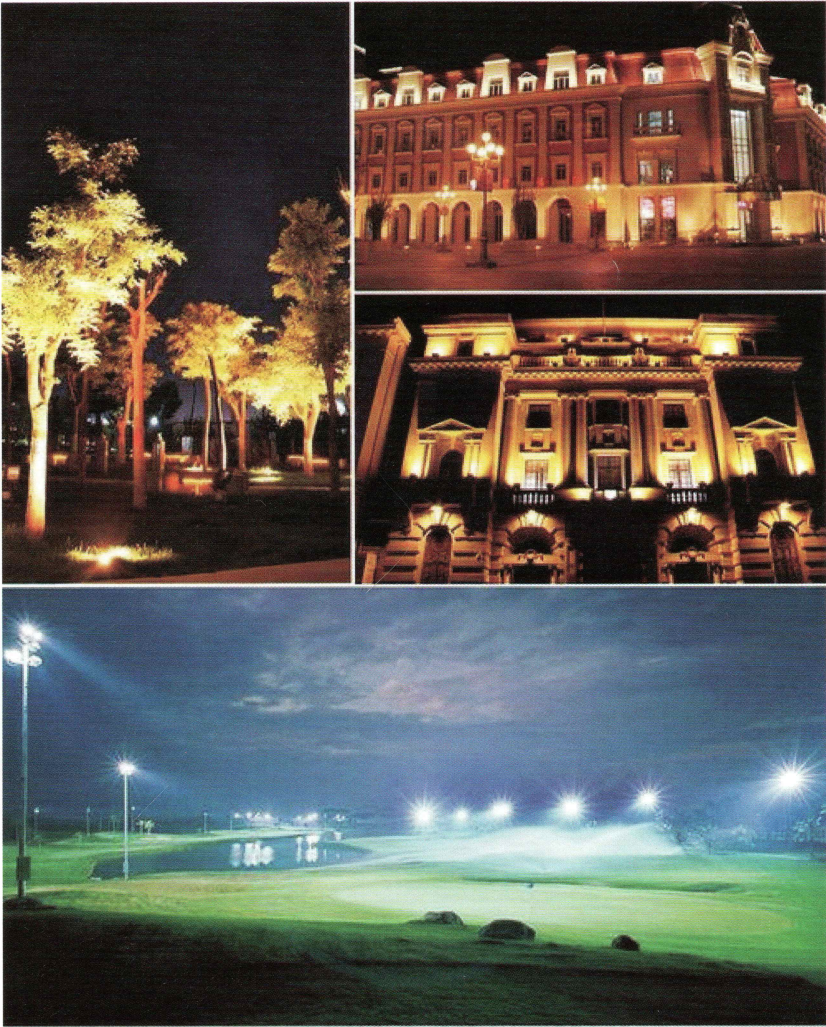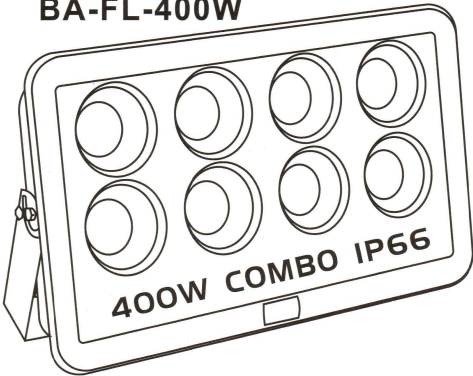

Product Name	Material	Watts	Voltage	Lamp Size	LED Light Source	Luminous Efficacy	PF	RA
LED Flood Light	Aluminum	50W	AC85-265V	240*220*80mm	COB	100LM/W	>0.95	>80
LED Flood Light	Aluminum	100W	AC85-265V	300*245*80mm	COB	100LM/W	>0.95	>80
LED Flood Light	Aluminum	200W	AC85-265V	365*305*80mm	COB	100LM/W	>0.95	>80
LED Flood Light	Aluminum	300W	AC85-265V	435*335*100mm	COB	100LM/W	>0.95	>80
LED Flood Light	Aluminum	400W	AC85-265V	520*365*100mm	COB	100LM/W	>0.95	>80
LED Flood Light	Aluminum	500W	AC85-265V	625*365*100mm	COB	100LM/W	>0.95	>80
LED Flood Light	Aluminum	600W	AC85-265V	735*365*100mm	COB	100LM/W	>0.95	>80
LED Flood Light	Aluminum	800W	AC85-265V	840*365*100mm	COB	100LM/W	>0.95	>80





# COMBO ILLUMINAZIONE USER MANUAL

## LED FLOOD LIGHT كشاف ضوئي ليد BA-FL-300W

### Notice:

1. The product is LED module. Please make sure the installation is strong and wiring is reliable enough.
2. Don't let the products fall down or rub with other things, otherwise the product will be damaged
3. Make sure the voltage is 220-240V~ 50/60Hz, otherwise the product will be damaged.
4. This product is class III luminaire.
5. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
6. Don't touch the products until it has been cool down, otherwise you may get burns.

### Installation

Before the installation, please check the outer surface of the product. If any damage is found, do not install the unit, please place it carefully into the packing box and notify our service agent.

1. Switch off the power.
2. Open luminaire, fix the LED module on the luminaire enclosure.
3. Connector to LED driver.
3. Use a certified terminal block and connect cable in right way:  
Firstly, connect the blue line; secondly, connect the brown neutral line.
4. Fix the luminaire to the mounting bracket.
5. Fix the LED cover.
6. Turn on the power, check if it is work normally.



لاحظ:

1. المنتج هو وحدة LED، يرجى التأكد من أن التثبيت قوي والأسلاك موثوقة بما فيه الكفاية.
2. لا تدع المنتجات تسقط أو فرك مع أشياء أخرى، وإلا فإن المنتج سوف يتضرر.
3. تأكد من الجهد هو DC48V، و 220-240V~، و 50/60Hz، وإلا فإن المنتج سوف يتضرر.
4. هذا المنتج هو من الدرجة الثالثة luminaire.
5. لا يستبدل مصدر الضوء الموجود في هذا اللمinaire إلا بالشركة المصنعة أو وكيله أو شخص مؤهل مماثل.
6. لا تلمس المنتجات حتى يبرد، وإلا قد تحصل على حروق.

تركيب

قبل التثبيت، يرجى التحقق من السطح الخارجي للمنتج. إذا تم العثور على أي ضرر، لا تثبيت وحدة، يرجى وضعه بعناية في مربع التعبئة وإخطار وكيل الخدمة لدينا.

1. إيقاف تشغيل الطاقة.
2. Open الإنارة، إصلاح وحدة LED على الضميمة الإنارة.
3. موصل لبرنامج تشغيل LED.
3. Use كحلة محطة معتمدة وتوصيل كابل في الطريق الصحيح:  
أولا، ربط الخط الأزرق. ثانيا، قم بتوصيل الخط المحايد البني.
4. إصلاح الإنارة إلى قوس تصاعد.
5. إصلاح غطاء LED.
6. بدوره على السلطة، والتحقق مما إذا كان يعمل بشكل طبيعي.

