


تحديد

نموذج	BA-503	BA-506	BA-586
باور تابس @100 فولت	3 واط	3 واط	1.5 واط / 3 واط / 6 واط
باور تابس @70 فولت	1.5 واط	1.5 واط	0.75 واط / 1.5 واط / 3 واط
معاوقة	أسود -COM أبيض -K Ω 0.21	أسود -COM أبيض -K Ω 0.21	أسود -COM أبيض -K Ω 0.21
SPL (1 وات / 1 م)	91dB	91dB	91dB
رد التردد	90-16KHz	90-16KHz	90-16KHz
حجم انقطاع	Φ 150mm	Φ 170mm	Φ 90mm
أبعاد	Φ 172×65mm	Φ 194×71mm	Φ 100×80mm
وزن	0.44Kg	0.56Kg	0.55Kg


تثبيت

الخطوة الأولى:

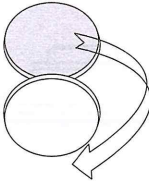


1: يتم فتح الثقوب على السقف، وفقاً لحجم التركيب

الخطوة الثاني:



2: قم بتوجيه البوق نحو الفتحة، وافتح مقطع الربيع.

الخطوة الثالثة:




3: ادفع بقوة لتكوين الزهرة الصغيرة، يتسطح القرن بالقرب من سطح السقف.

Specifications

Model	BA-503	BA-506	BA-586
Power Taps@100V	3W	3W	1.5W/3W/6W
Power Taps@70V	1.5W	1.5W	0.75W/1.5W/3W
Impedance	Black-COM White-0.21KΩ	Black-COM White-0.21KΩ	Black-COM White-0.21KΩ
SPL(1W/1M)	91dB	91dB	91dB
Freq Response	90-16KHz	90-16KHz	90-16KHz
Cutout Size	Φ150mm	Φ170mm	Φ90mm
Dimensions	Φ172×65mm	Φ194×71mm	Φ100×80mm
Weight	0.44Kg	0.56Kg	0.55Kg


Installation

Step 1

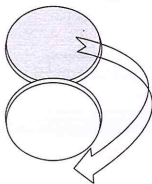


step 1:On the ceiling,holes are opened according to the mounting size.

Step 2



Step 2:Aim the horn at the openinghole, and open the spring clip.

Step 3



Step 3:Push up hard to make the little flower horn flatten close to the ceiling surface.